




Part No. B-45523 Valve Guide Reamer (7mm)

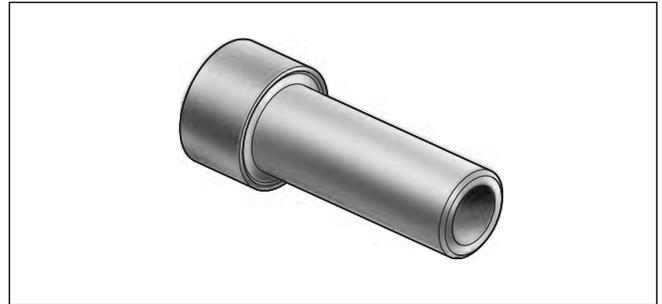


**Part No. B-45655 Crankshaft/Sprocket Shaft
Bearing Remover/Installer Pilot/Driver
Use with HD-42720-5.**

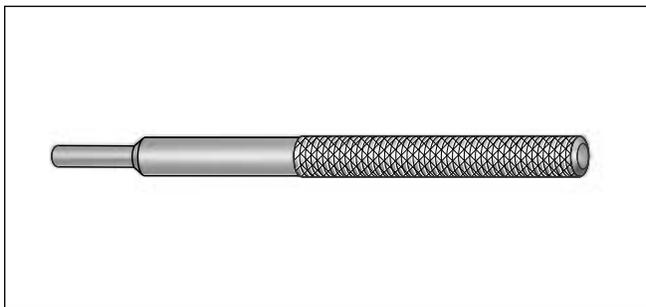


**Part No. B-45524-1 Valve Guide Driver (7mm)
Use with B-45524-2A.**

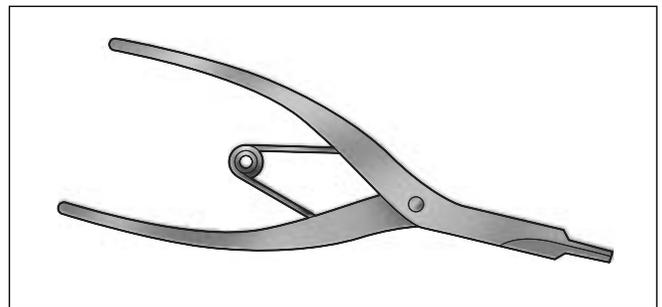


**Part No. J-5586A Transmission Shaft
Retaining Ring Pliers**

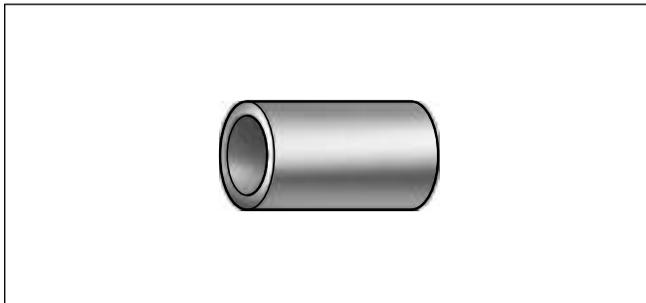


Part No. B-45524-2A Valve Guide Installer Sleeve (7mm)

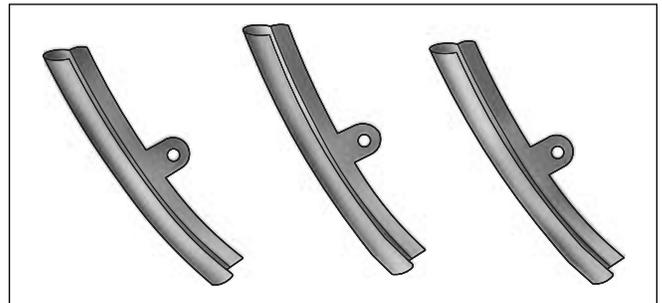


Part No. HD-01289 Rim Protectors

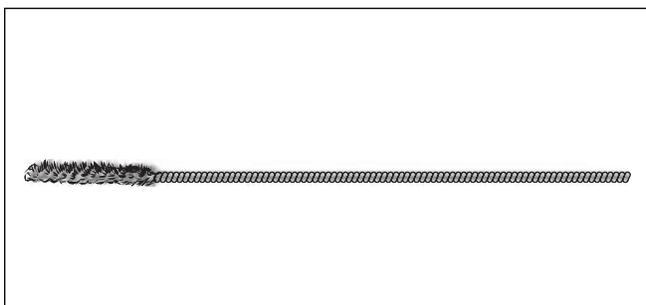


Part No. B-45525 Valve Guide Hone (7mm)

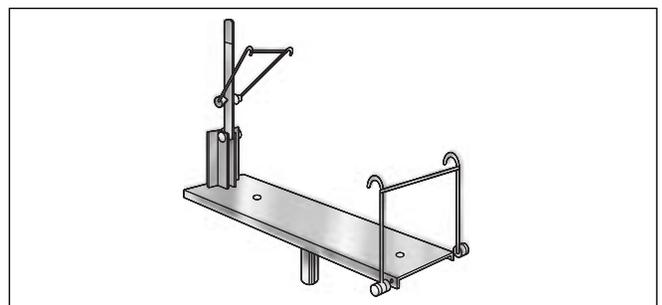

Part No. HD-21000 Tire Spreader

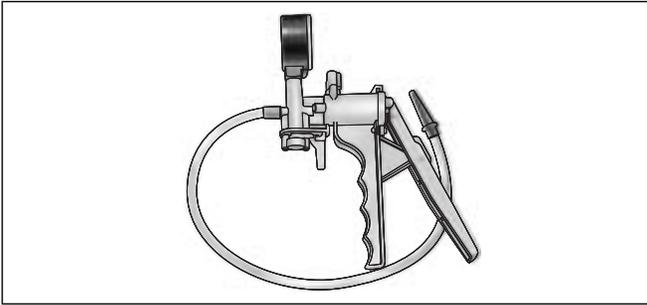


Part No. HD-23738A Mity-Vac Vacuum Pump

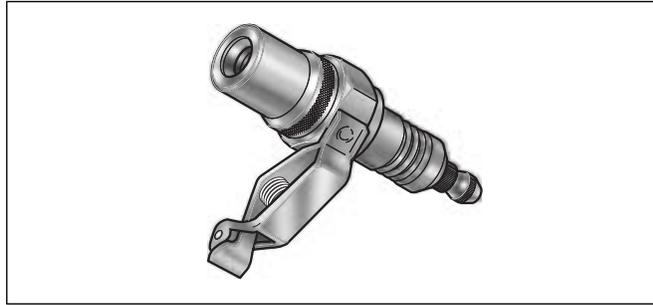


Part No. HD-26792 Spark Tester



Part No. HD-25070 Robinair Heat Gun
Use with HD-41183.

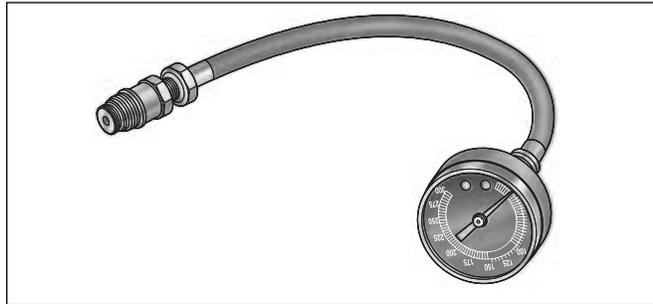


Part No. HD-33223-1 Cylinder Compression Gauge

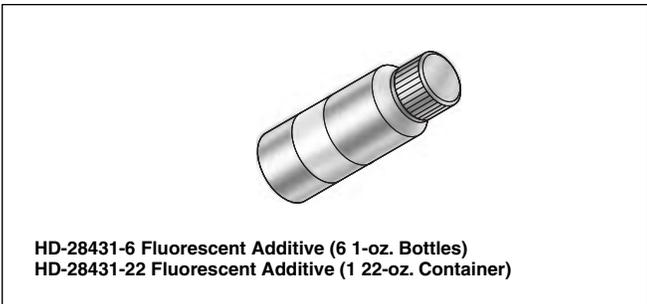


HD-28431-6 Fluorescent Additive (6 1-oz. Bottles)
HD-28431-22 Fluorescent Additive (1 22-oz. Container)


Part No. HD-28431B Fluorescent Additive
(24 1-oz. Bottles). Use with HD-35457,
HD-47183 or HD-47184.

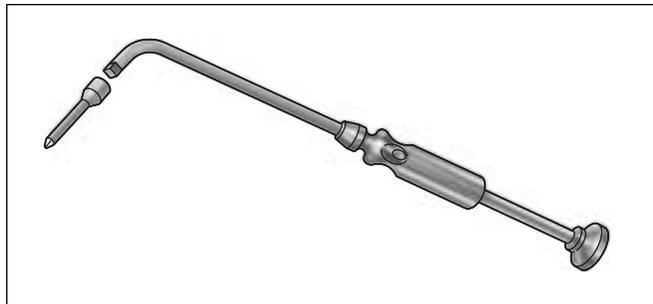


Part No. HD-33413A Carburetor Idle Adjuster

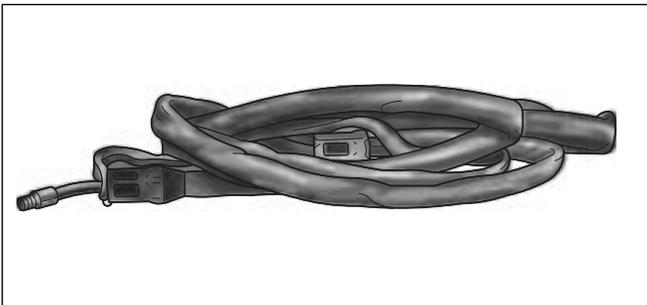


Part No. HD-28700 Tire Bead Expander

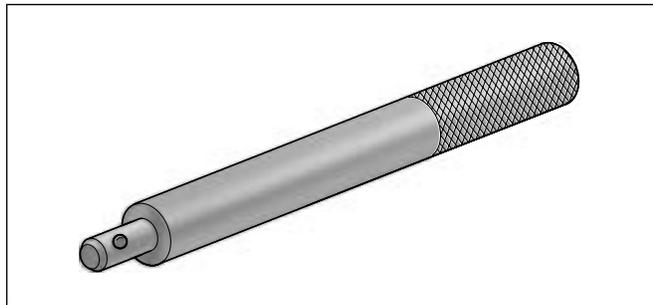

Part No. HD-33416 Universal Driver Handle
(12 Inch Length)

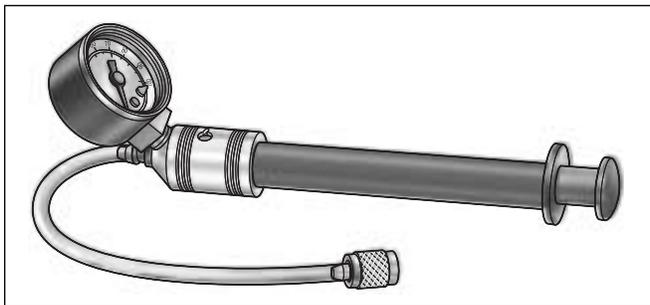


Part No. HD-34633A Air Suspension Pump and Gauge

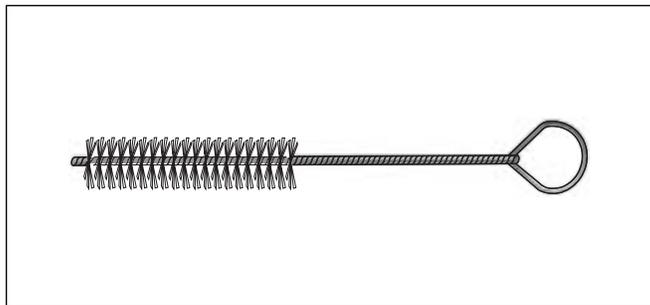


Part No. HD-34751 Valve Guide Cleaning Brush




Part No. HD-34634 Fork Oil Seal Installer

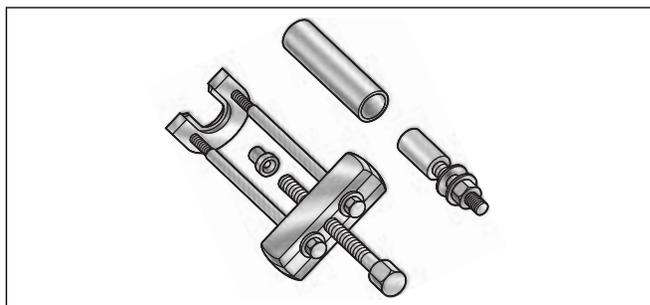


Part No. HD-34902B Mainshaft Bearing Inner Race Remover and Installer

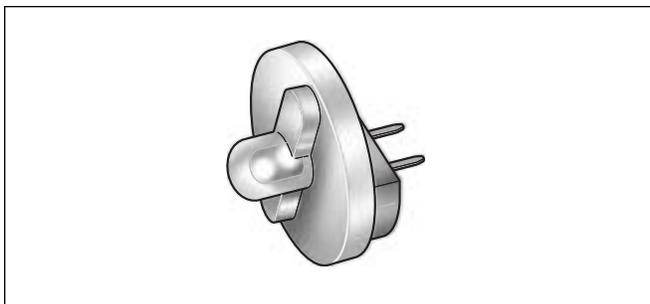


Part No. HD-34730-2C Fuel Injector Test Lamp

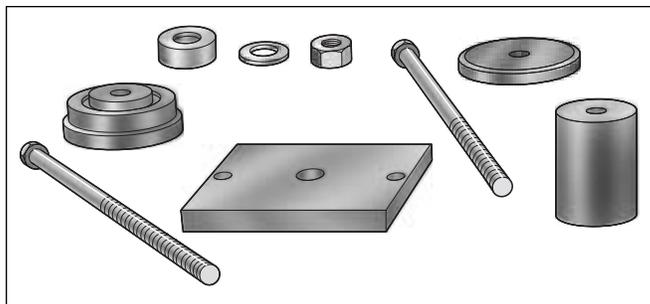


Part No. HD-35316B Main Drive Gear Remover/Installer and Main Drive Gear Bearing Installer

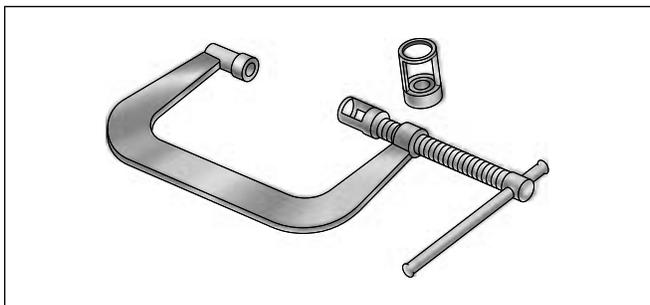

Part No. HD-34736B Valve Spring Compressor

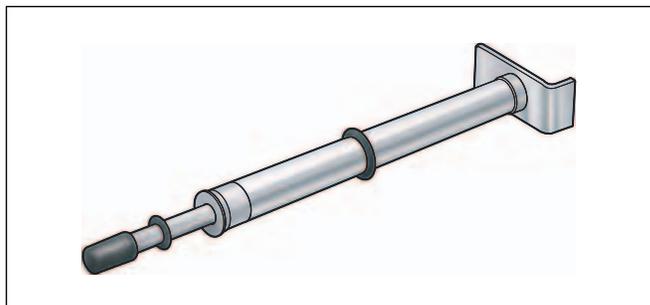


Part No. HD-35381A Belt Tension Gauge

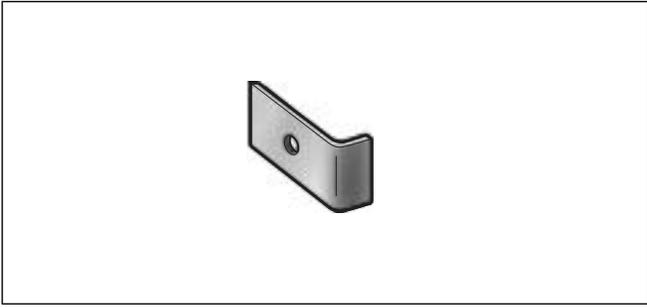


Part No. HD-35381-3 Belt Tension Gauge Adapter




Part No. HD-35667A Cylinder Leakdown Tester

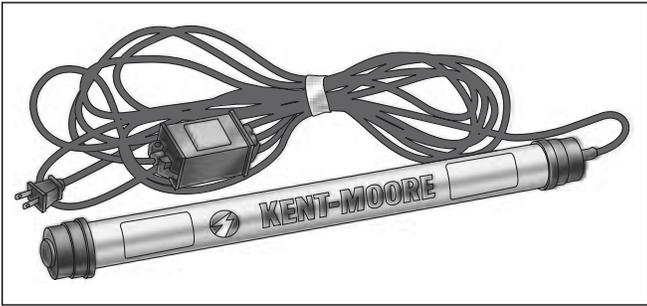


Part No. HD-35457 Black Light Leak Detector

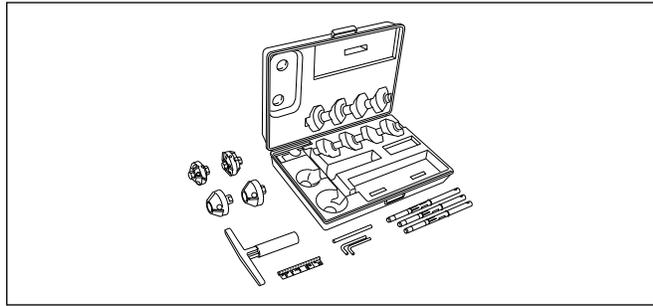


Part No. HD-35758B Neway Valve Seat Cutter Set

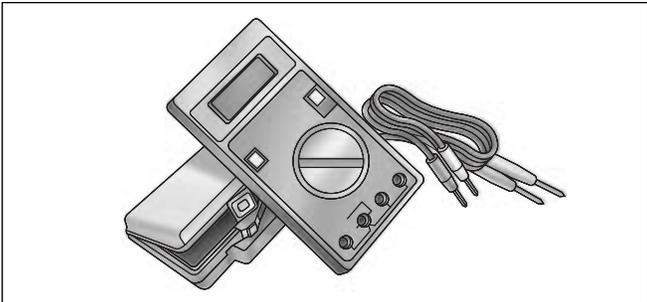


Part No. HD-35500B Digital Multi-Meter

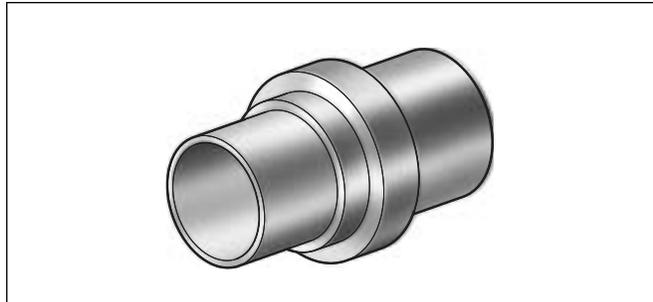


Part No. HD-37842A Main Drive Gear Needle Bearing and Small Oil Seal Installer

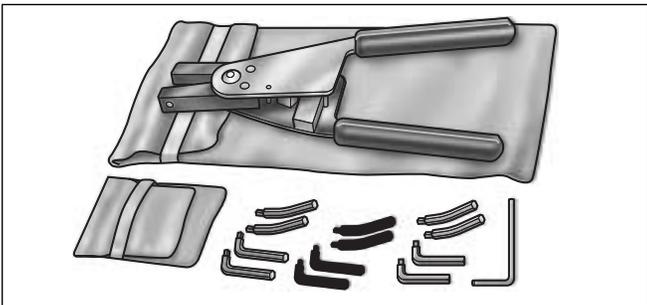


Part No. HD-35518 Internal/External Retaining Ring Pliers

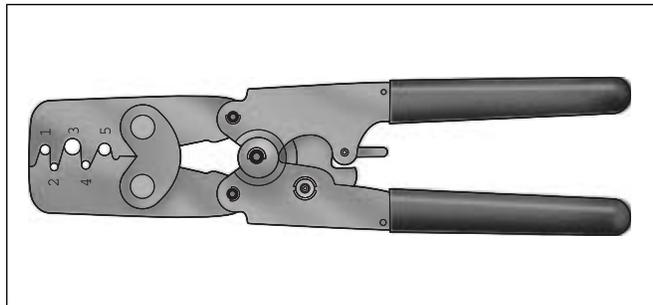


Part No. HD-38125-6 Packard Terminal Crimp Tool (Sealed)

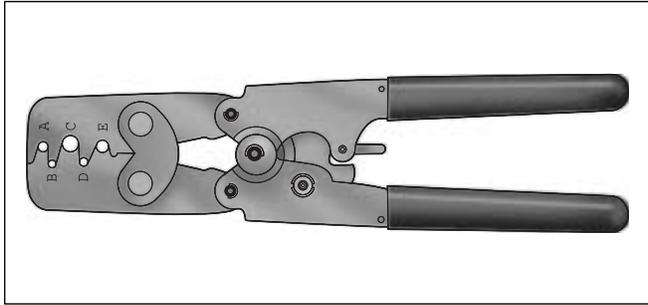


Part No. HD-38125-7 Packard Terminal Crimp Tool (Nonsealed)

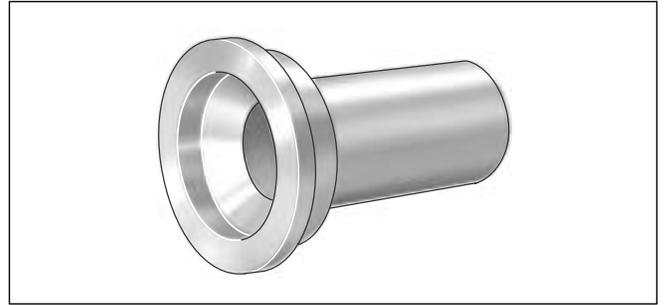


Part No. HD-39361A Sprocket Shaft Oil Seal Installer

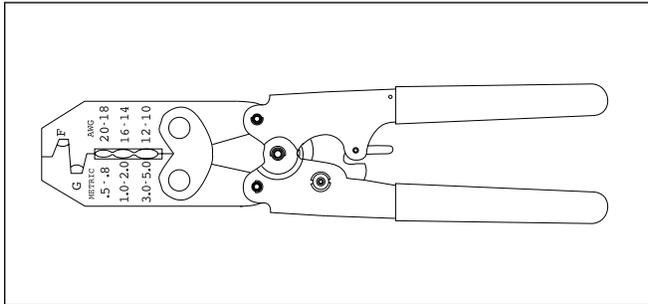


Part No. HD-38125-8 Packard Terminal Crimp Tool

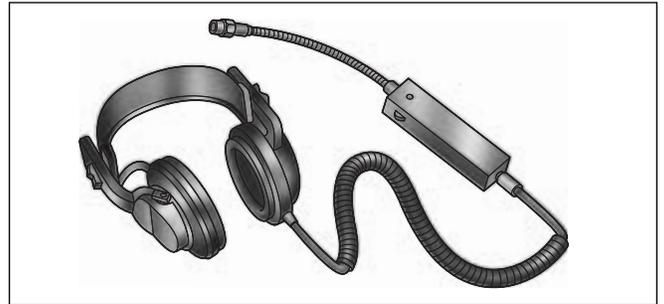


Part No. HD-39565 Engine Sound Probe

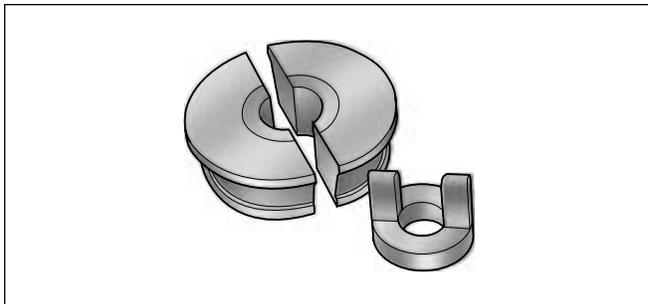


Part No. HD-39301A Steering Head Bearing Race Remover. Use with HD-33416.

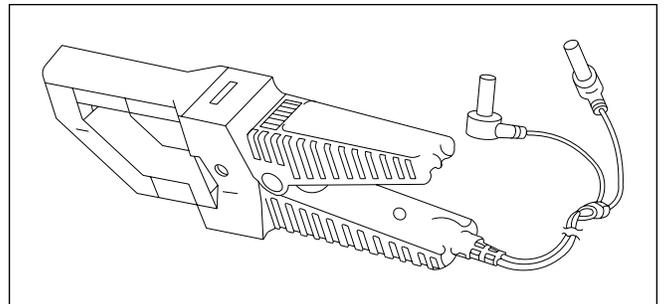


Part No. HD-39617 Inductive Amp Probe. Use with HD-35500B.

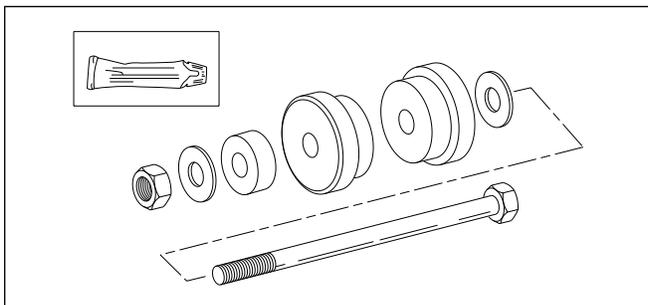


Part No. HD-39302 Steering Head Bearing Race Installer

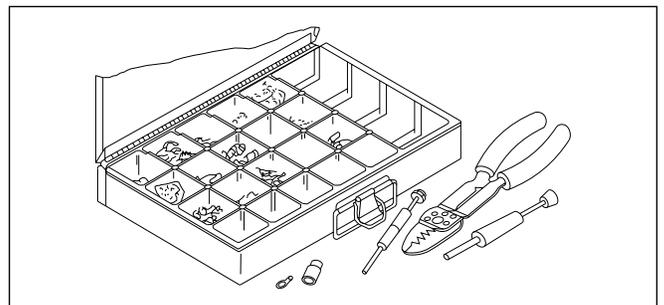


Part No. HD-39621 Electrical Terminal Repair Kit

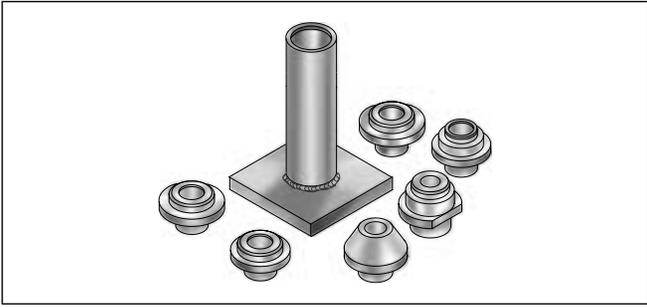


Part No. HD-39782A Cylinder Head Support Stand

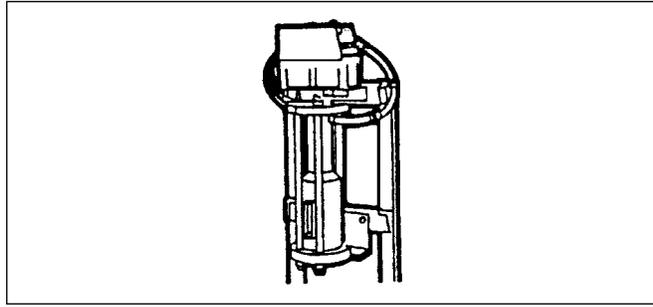


Part No. HD-39823 Oil Filter Crusher (Large)

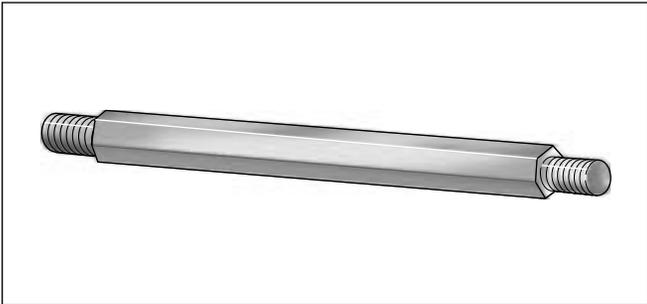


Part No. HD-39786 Cylinder Head Holding Fixture

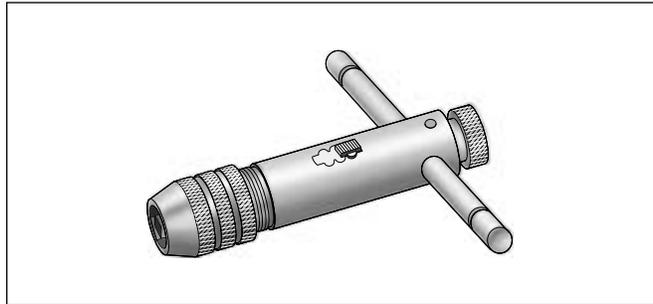


Part No. HD-39847 Reamer T-Handle

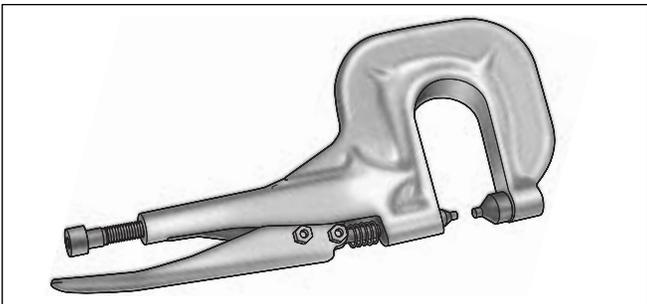


Part No. HD-39787A Rivet Tool

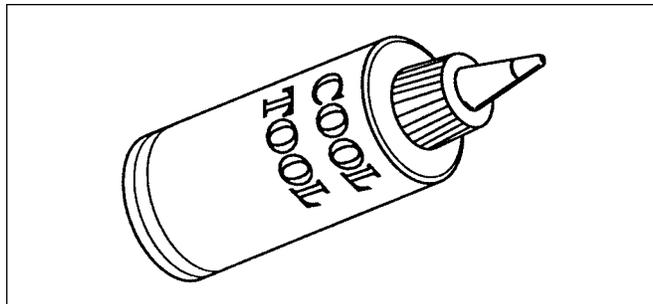

Part No. HD-39964 Reamer Lubricant (Cool Tool)

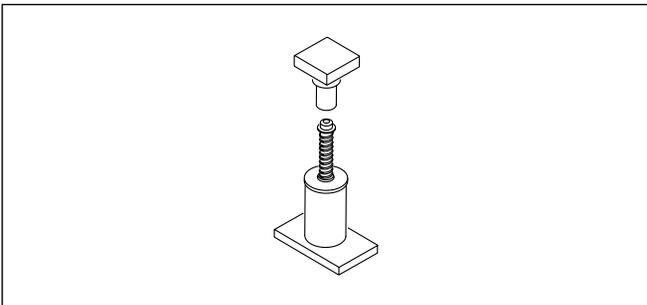


Part No. HD-39800 Oil Filter Crusher (Small)

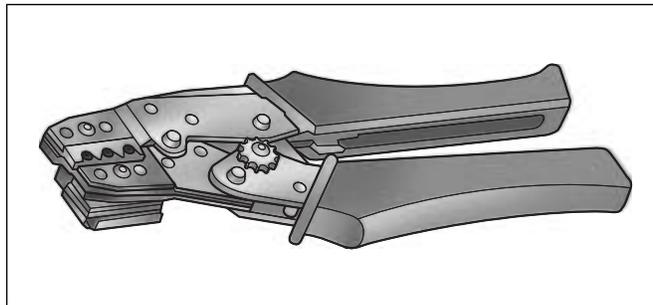


Part No. HD-39965 Deutsch Terminal Crimp Tool




Part No. HD-39969 Ultra Torch UT-100

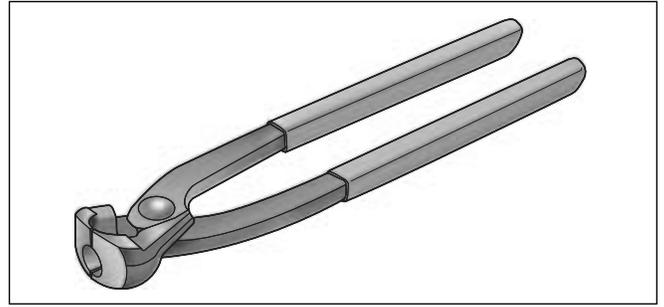


Part No. HD-41137 Two-Way Hose Clamp Pliers

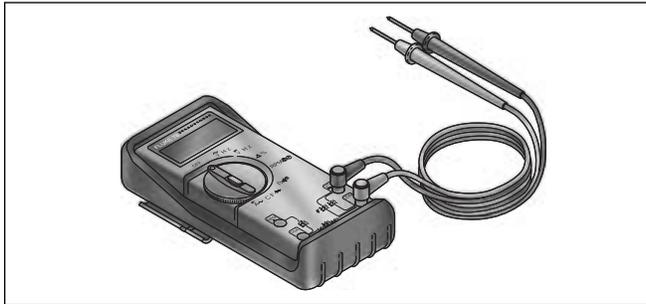


Part No. HD-39978 Fluke 78 Multimeter (DVOM)
Use with HD-41198 and HD-44608.

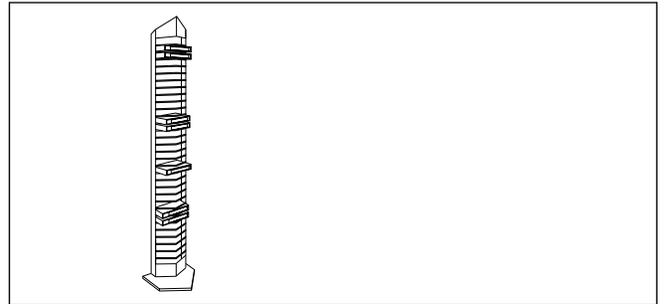


Part No. HD-41155 VHS Tape Storage Tower

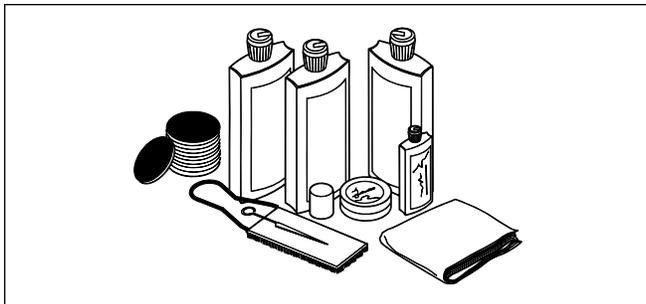


Part No. HD-39994 Paint Repair Kit

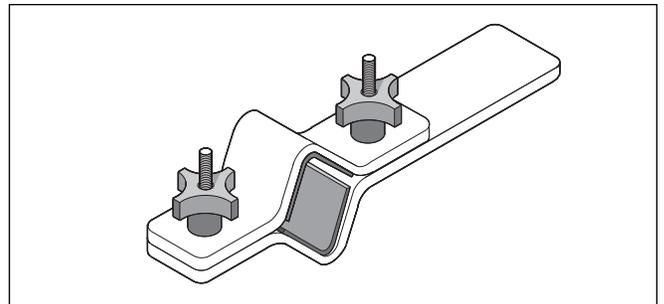


Part No. HD-41177 Fork Tube Holder

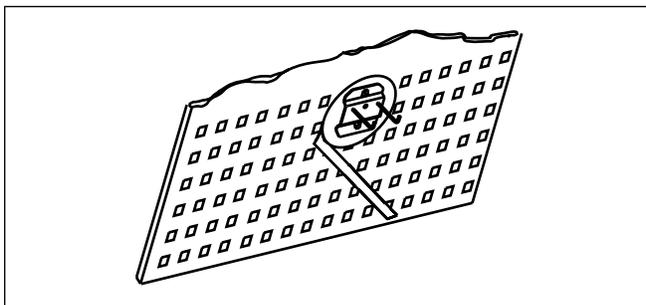


Part No. HD-41025A Tool Organizational System

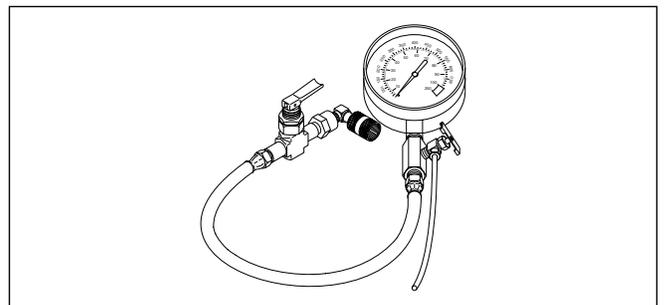


Part No. HD-41182 Fuel Pressure Gauge

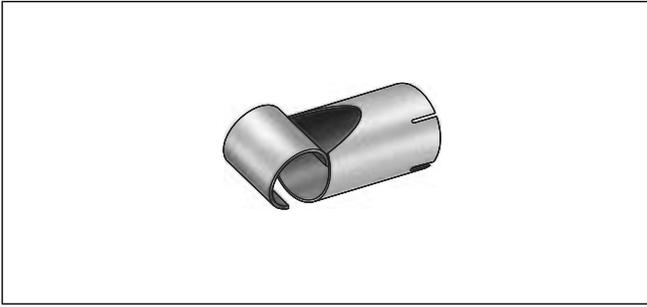


Part No. HD-41183 Robinair Heat Gun Shrink Tool Attachment. Use with HD-25070.

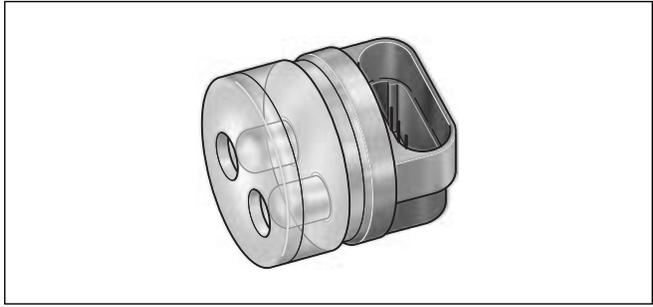


Part No. HD-41199-3 Idle Speed Control Actuator Test Lamp

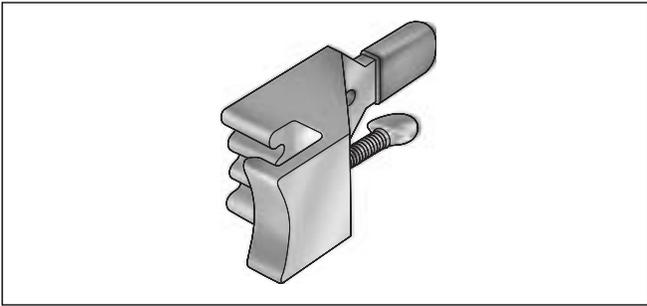

Part No. HD-41184 Final Drive Sprocket Locking Tool

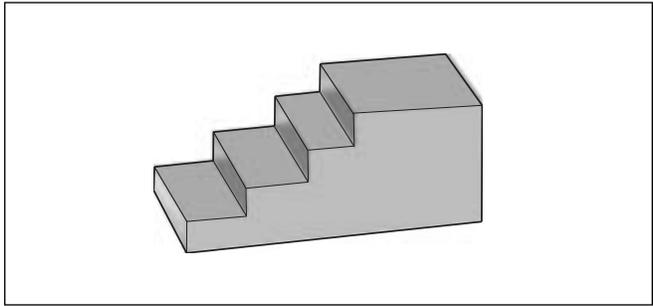


Part No. HD-41214 Primary Drive Locking Tool

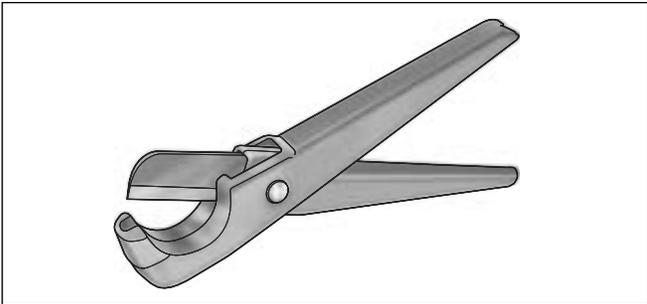


Part No. HD-41185 Hose Cutter




Part No. HD-41404A Harness Connector Test Kit

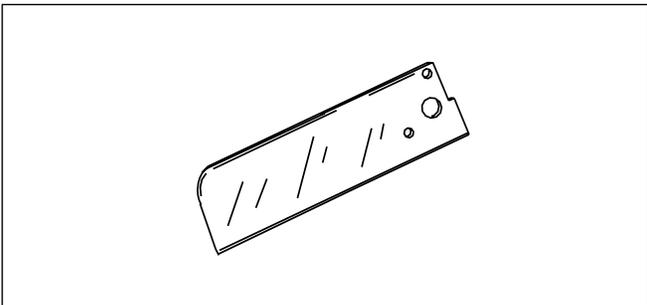


Part No. HD-41185-1 Hose Cutter Blade

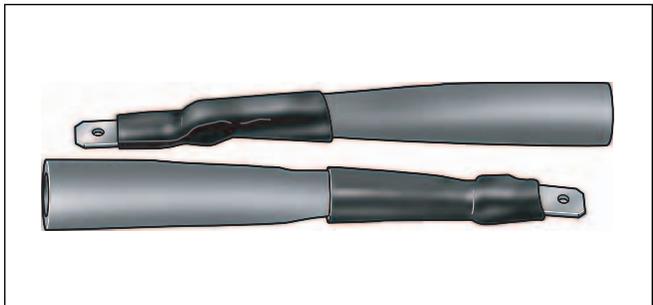


Part No. HD-41404-46 Dark Blue Pin Probes Use with HD-41404A.

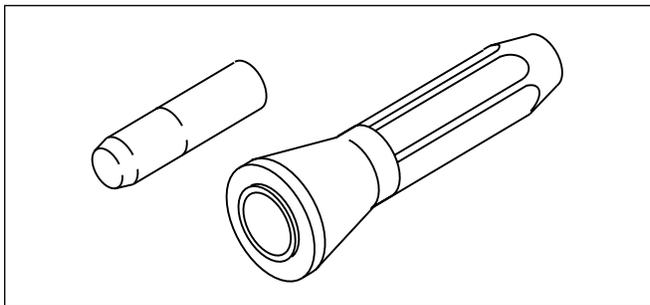


Part No. HD-41405 Main Drive Gear Small Oil Seal Installer

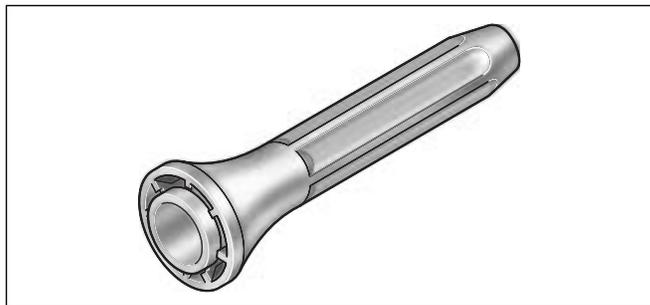


Part No. HD-41496 Main Drive Gear Large Oil Seal Installer

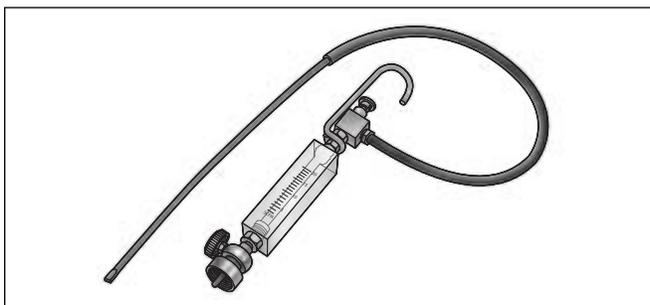


Part No. HD-41417 Propane Enrichment Kit

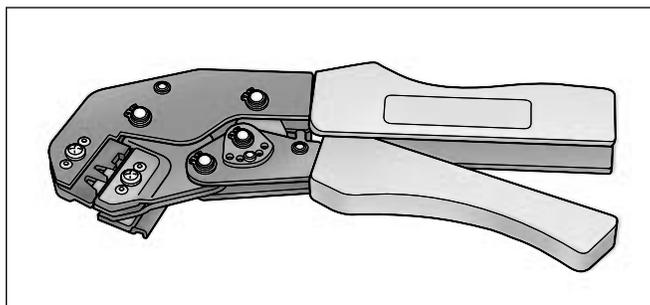


Part No. HD-41609 Amp Multilock Terminal Crimp Tool

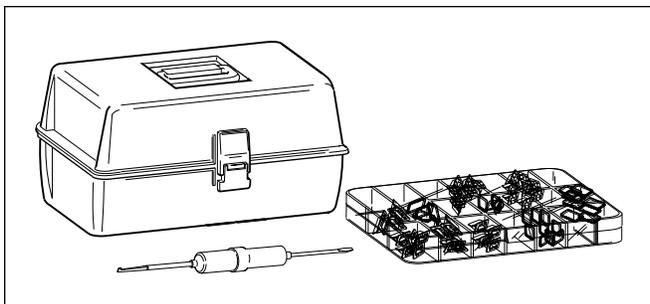


Part No. HD-41475 Deutsch Connector Service Kit Includes HD-41475-100.

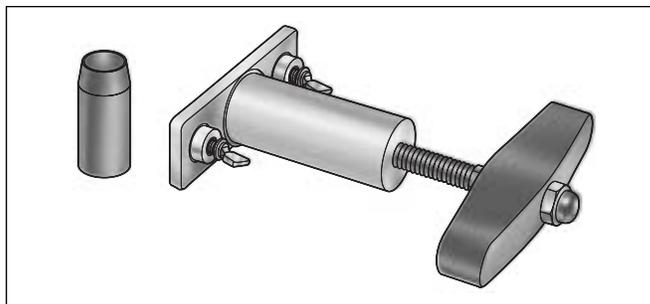


Part No. HD-41771 Rotor Remover/Installer

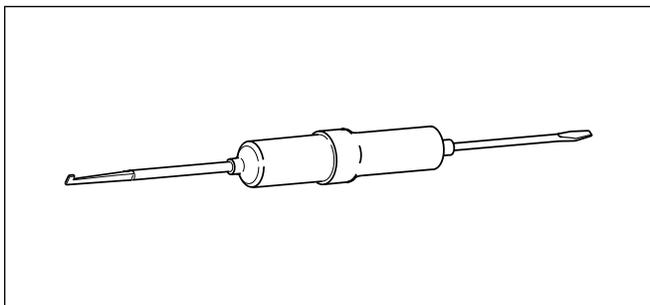


Part No. HD-41475-100 Deutsch Connector Pick Tool

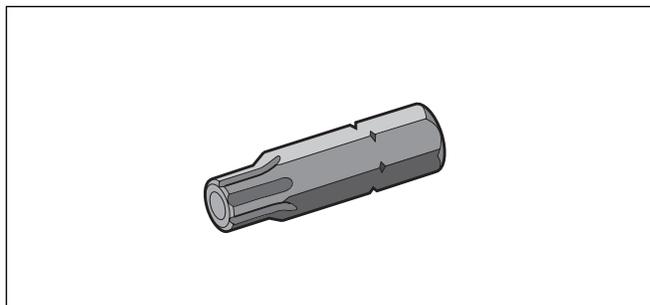


Part No. HD-42135 T-30 I.P. Torx Plus Spoke Nipple Driver

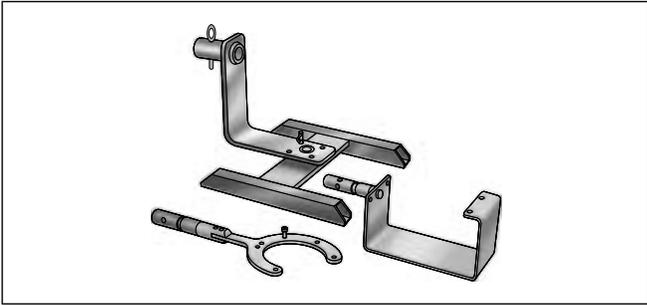


Part No. HD-42310 Engine/Transmission Bench Stand

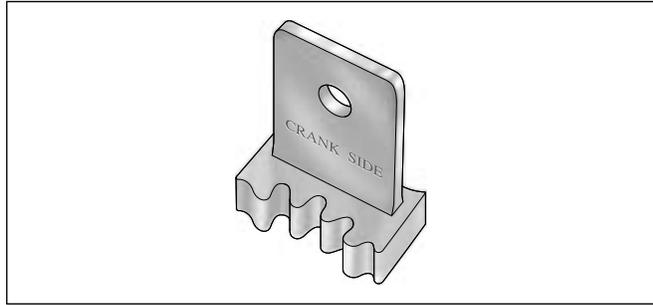


Part No. HD-42314 Crankshaft/Camshaft Sprocket Locking Tool

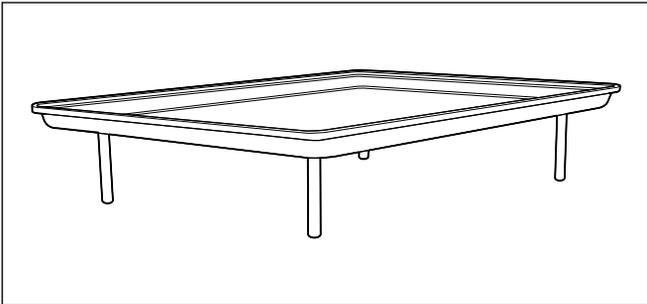


**Part No. HD-42310-150 Drip Pan
Use with HD-42310.**

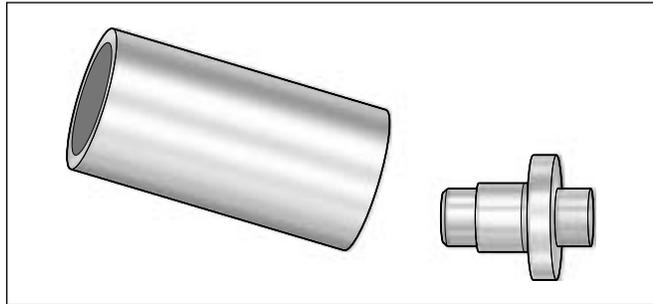

Part No. HD-42315 Crankshaft Bushing Remover/Installer

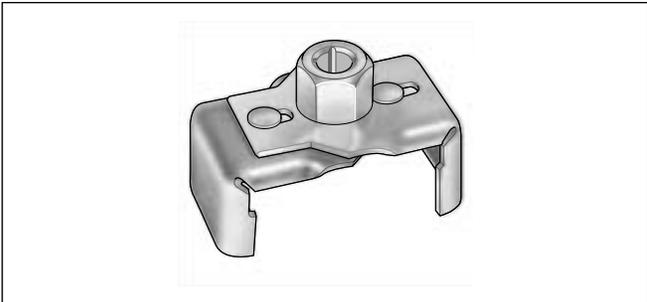


Part No. HD-42311 Oil Filter Wrench

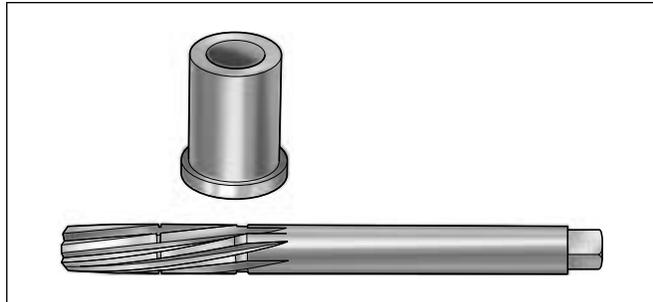


Part No. HD-42316 Crankshaft Bushing Reamer




**Part No. HD-42313 Cam Chain Tensioner Unloader
With Retention Pins**

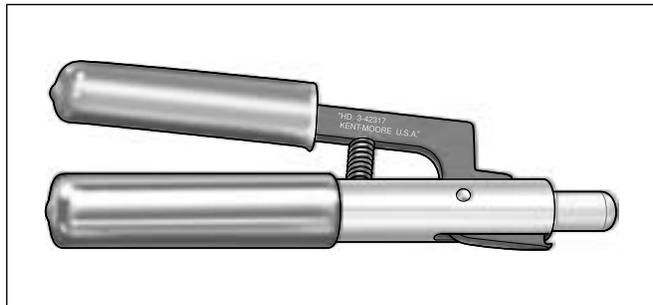


Part No. HD-42317A Piston Pin Circlip Remover/Installer

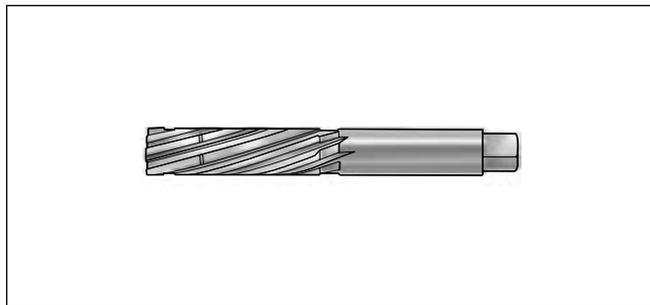


Part No. HD-42318 Connecting Rod Bushing Reamer

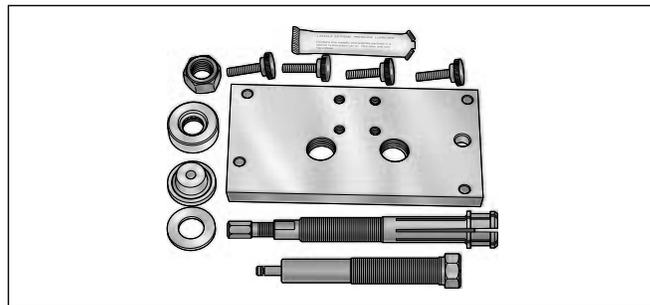


Part No. HD-42325A Camshaft Needle Bearing Remover/Installer

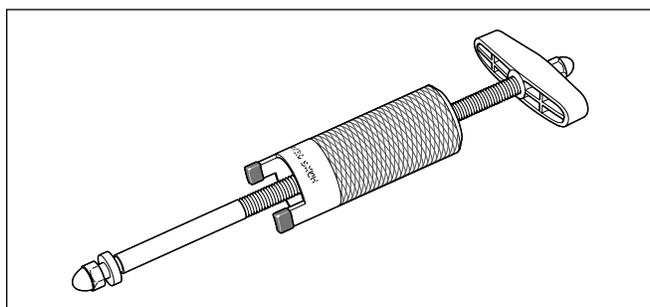


Part No. HD-42320A Piston Pin Remover

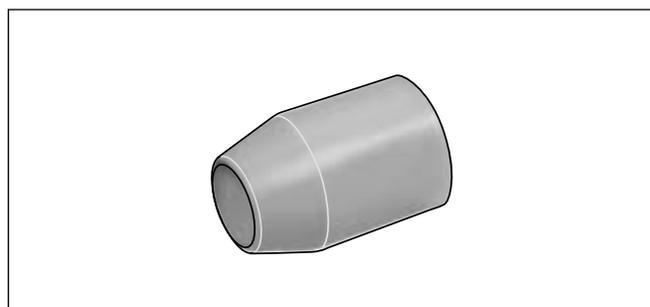


Part No. HD-42326A Crankshaft Guide

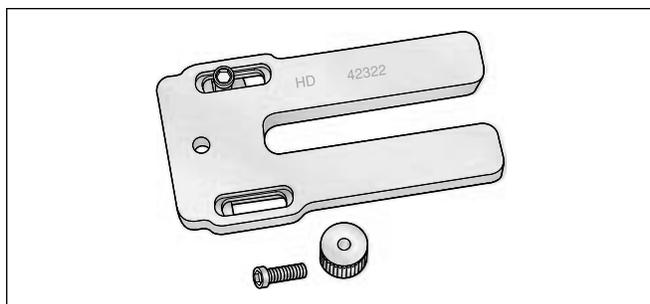


Part No. HD-42322 Piston Support Plate

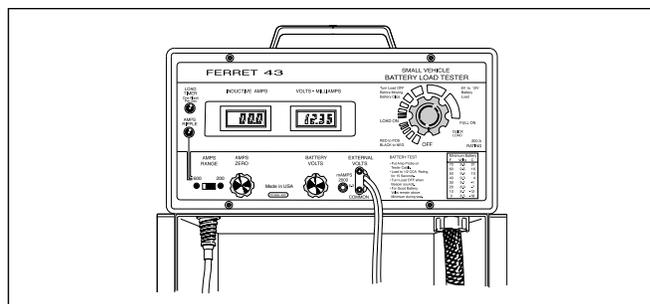


Part No. HD-42376 Battery/Charging System Load Tester

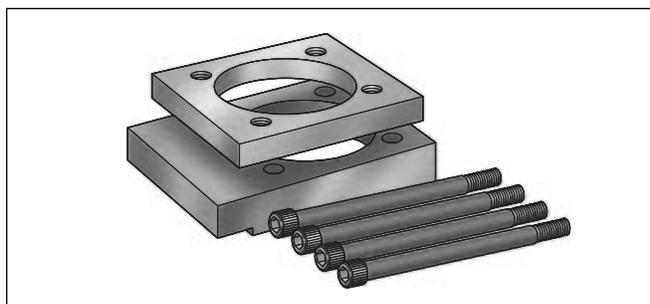


Part No. HD-42324A Cylinder Torque Plates

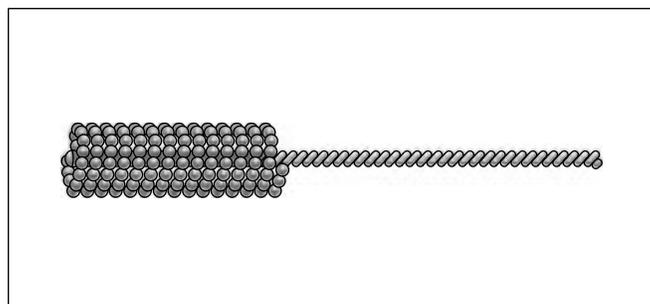


Part No. HD-42569 Connecting Rod Bushing Hone

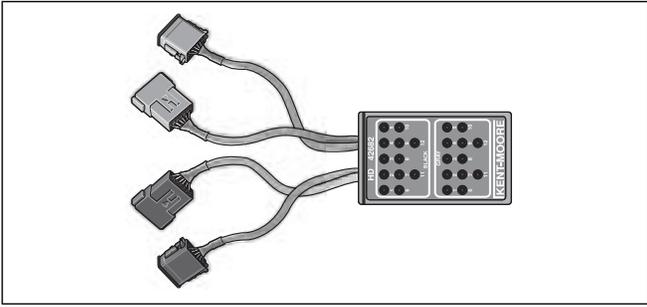


**Part No. HD-42682 Breakout Box (Carbureted)
Use with HD-39978.**

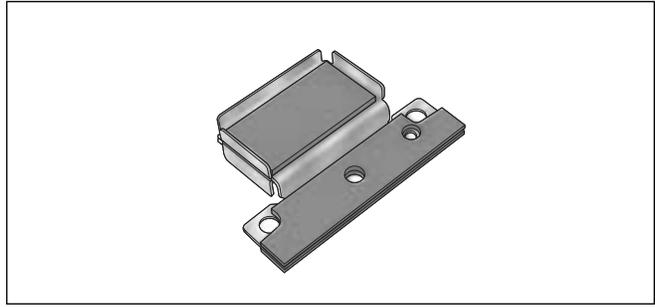


Part No. HD-43293A Brake Caliper Piston Remover

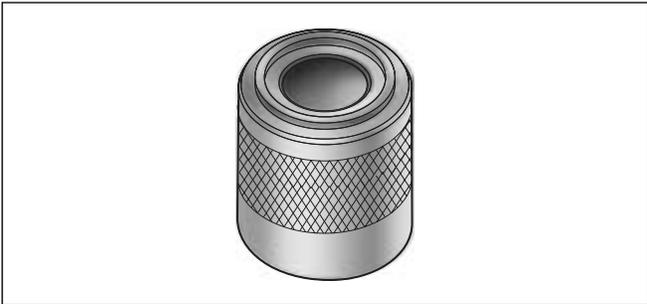


**Part No. HD-42720-5 Crankshaft/Sprocket Shaft
Bearing Remover/Installer Support Tube
Use with B-45655.**

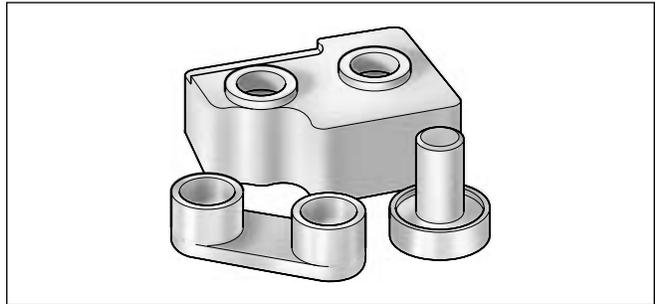


**Part No. HD-43644 Camshaft/Camshaft Bearing
Remover/Installer**

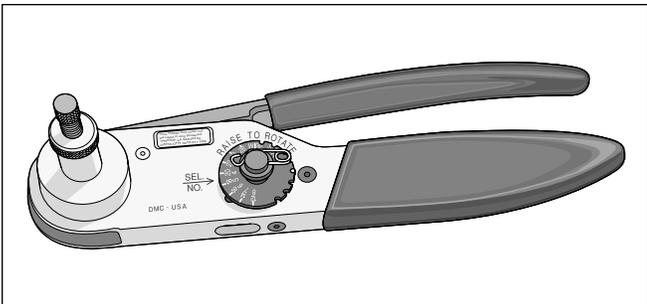


**Part No. HD-42879 Deutsch Solid Barrel Contact
Crimp Tool**

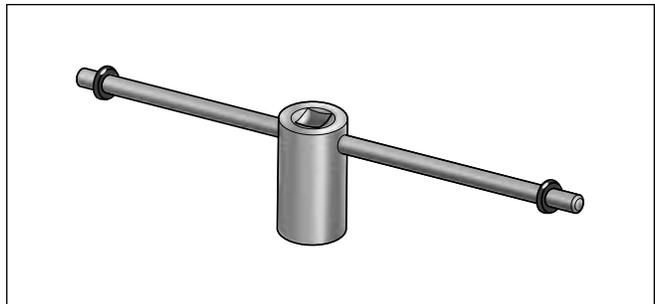


Part No. HD-43645 Reamer Handle/Drive Socket

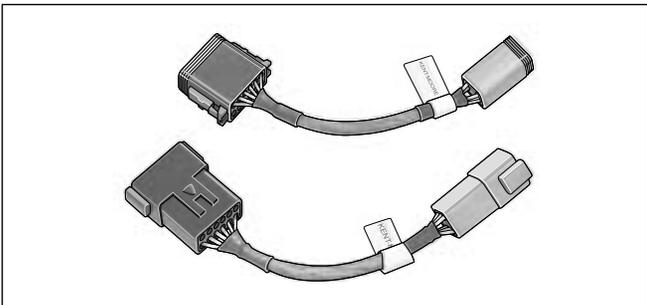


Part No. HD-42962 Breakout Box Adapters

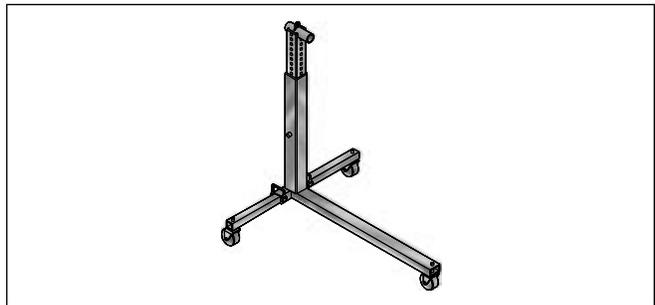


Part No. HD-43646A Engine Rolling Stand

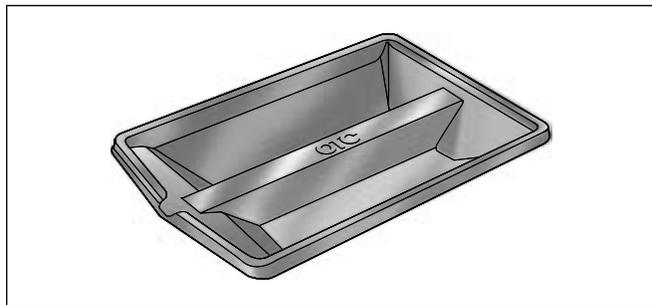


Part No. HD-43646-10 Drip Pan
Use with HD-43646A.

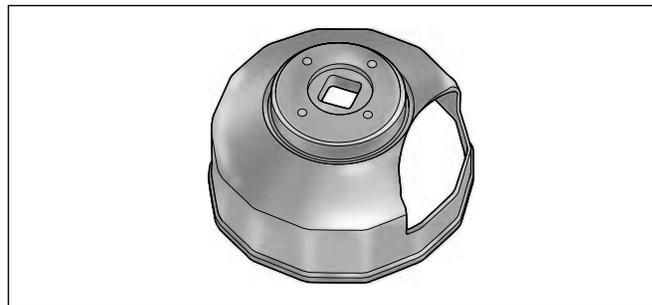


Part No. HD-44067 Oil Filter Wrench

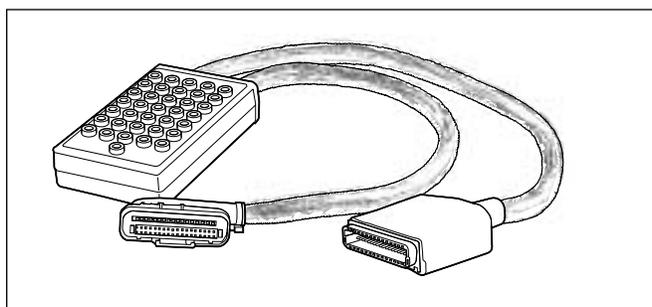


Part No. HD-43876 Breakout Box (EFI)
Use with HD-39978.

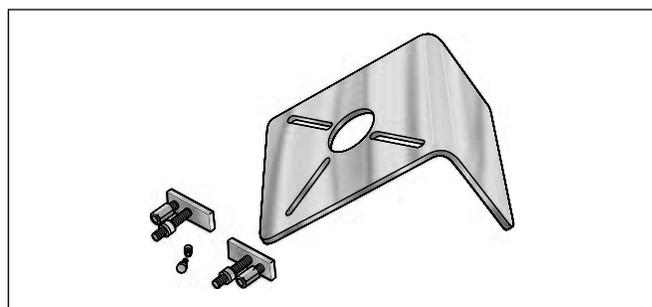

Part No. HD-44358 Flywheel Support Fixture

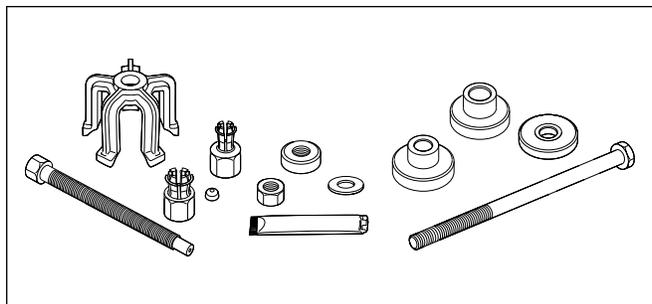


Part No. HD-44060 Wheel Bearing Remover/Installer

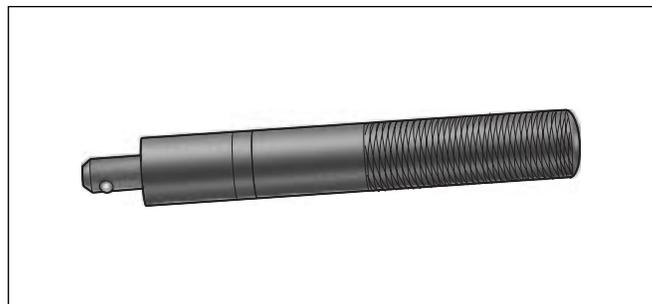


Part No. HD-44567 Universal Driver Handle
(7 Inch Length)



Part No. HD-44061 Fuel Pressure Gauge Adapter

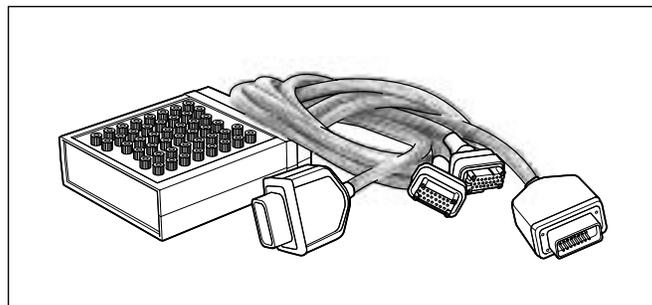


Part No. HD-44608 Radio Breakout Box
Use with HD-39978.

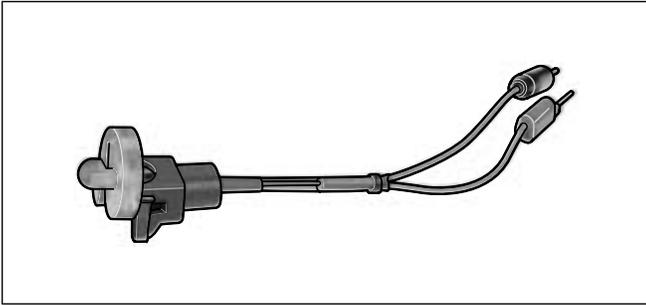


Part No. HD-44687 Ignition Coil Circuit Test Adapter




Part No. HD-45830 Tech Link

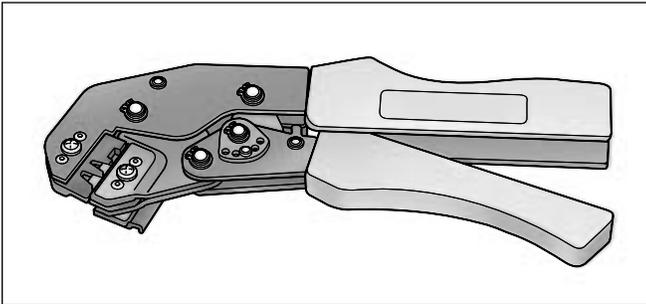


Part No. HD-44695 Mini Amp Multilock Terminal Crimp Tool

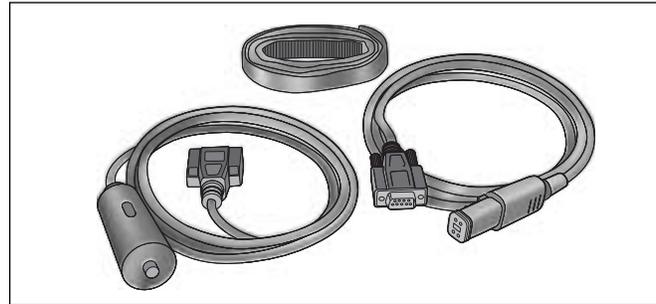


Part No. HD-45835 Road Test Kit

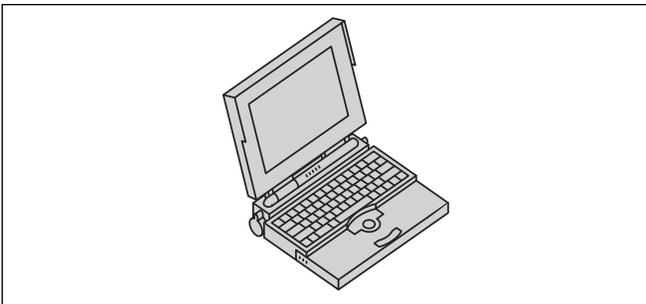

Part No. HD-44750 Digital Technician, HD-44750-P29 Panasonic Toughbook (Touch Screen), and HD-44750-P50 Panasonic Toughbook (Non-Touch Screen)

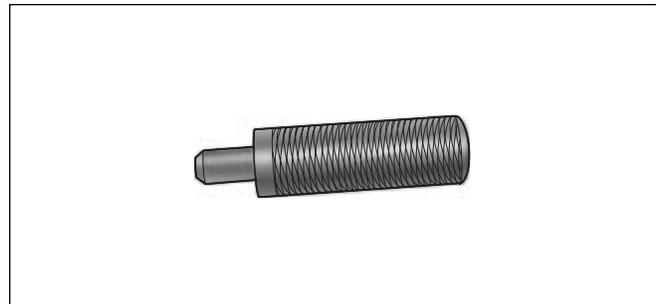


Part No. HD-45907 Universal Driver Handle (4 Inch Length)

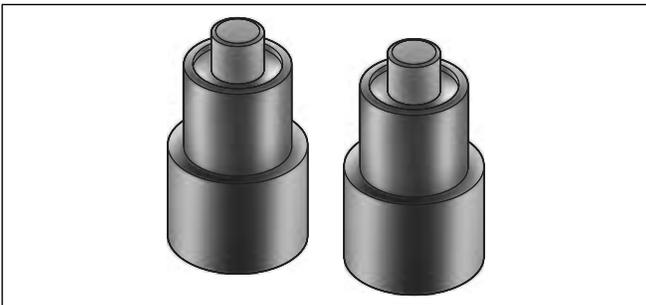


Part No. HD-45327 Rear Swingarm Bearing Installer




Part No. HD-45928 Packard Micro 64 Terminal Remover

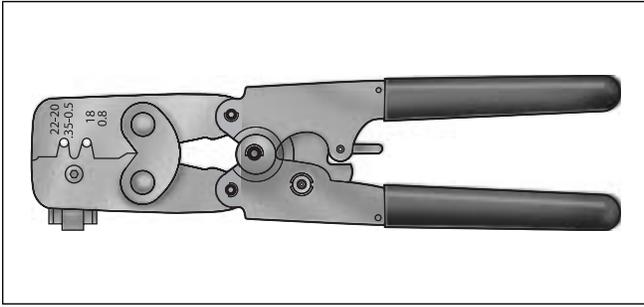


Part No. HD-45929 Packard Micro 64 Terminal Crimper

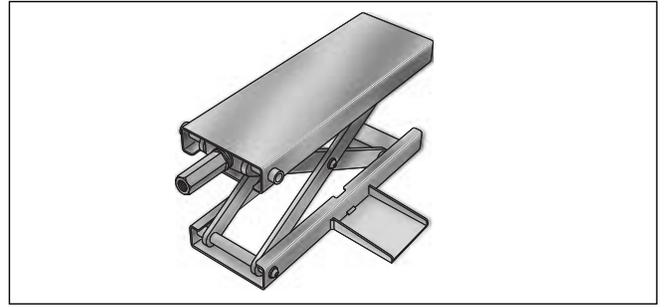


**Part No. HD-45968 Fat Jack
Use with HD-45967.**

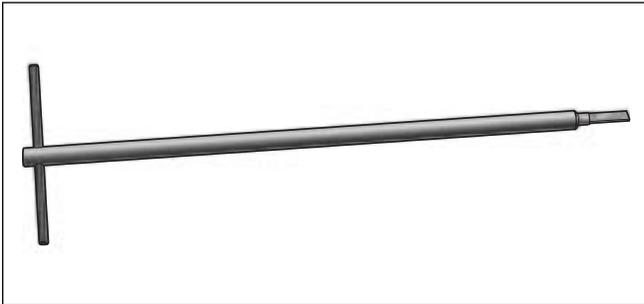


Part No. HD-45961 Ignition Switch Connector Remover

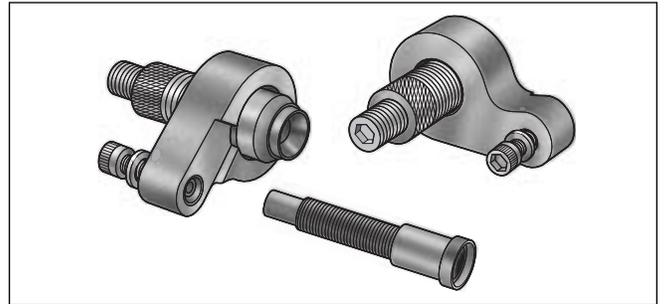


Part No. HD-46247 Vehicle Alignment Tool

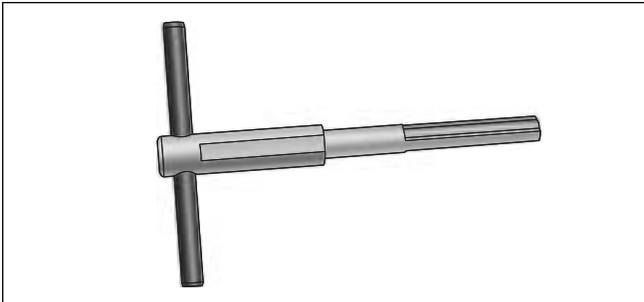


Part No. HD-45962 Ignition Switch Alignment Tool

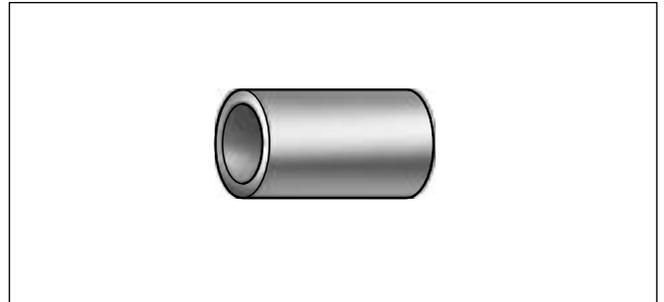


**Part No. HD-46583 Valve Guide Installer Sleeve
(103 cubic inch)**

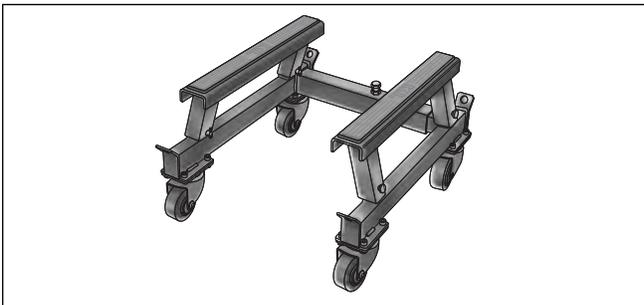


**Part No. HD-45967 Shop Dolly
Use with HD-45968.**

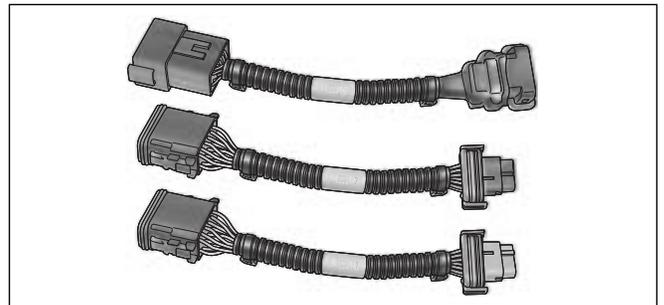


**Part No. HD-46601 Instrument Harness Adapters
Use with HD-42682.**

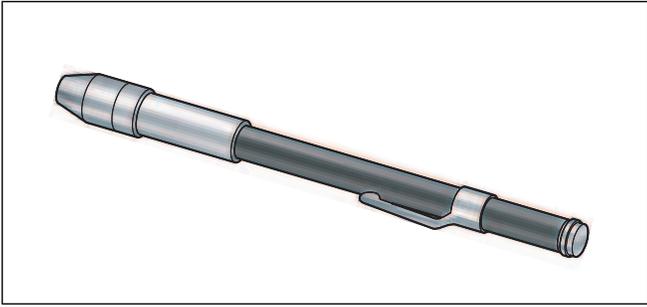


Part No. HD-47183 Black Light Leak Detector Penlight

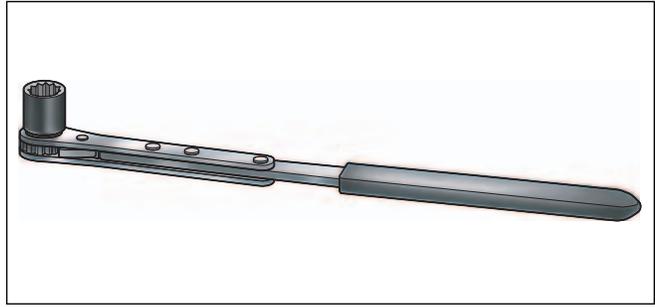


Part No. HD-47248 Rocker Housing Wrench

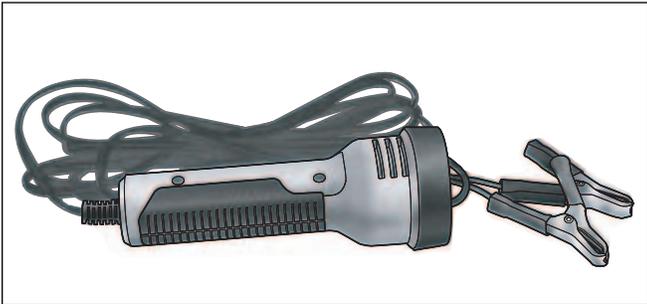


Part No. HD-47184 Black Light Leak Detector Flashlight

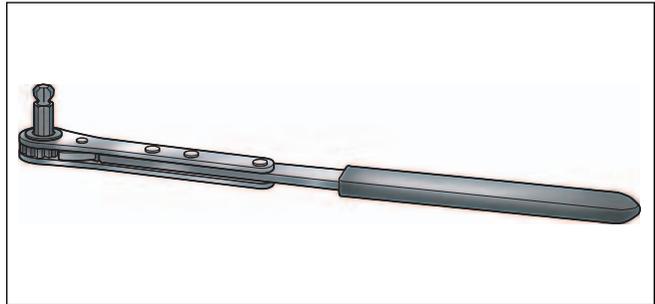


Part No. HD-47250 Intake Manifold Wrench

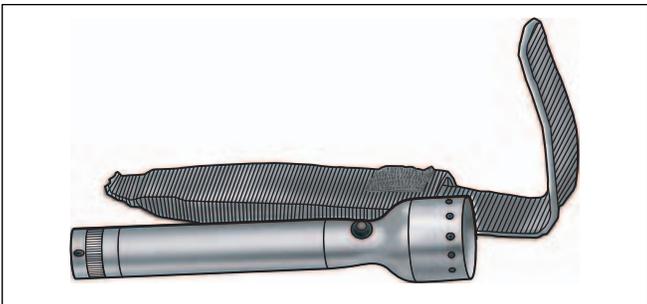


Part No. HD-47187 Technician's Penlight

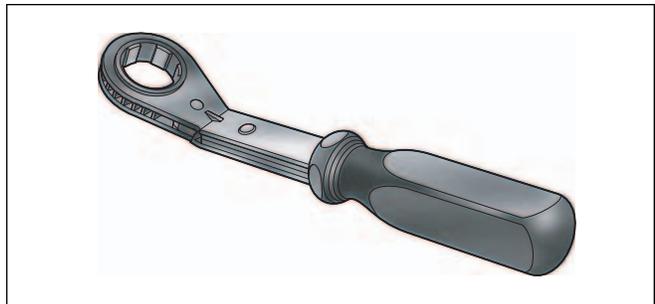


Part No. HD-47257 Engine Rotation Wrench

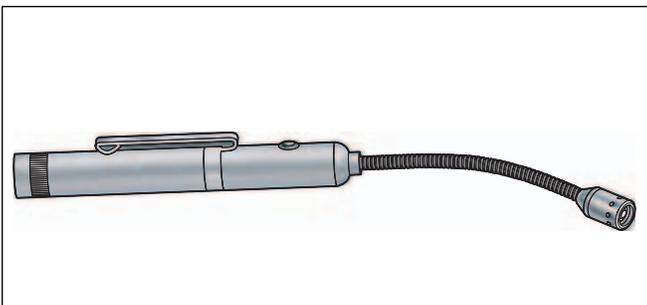


Part No. HD-47188 Technician's Flex Light

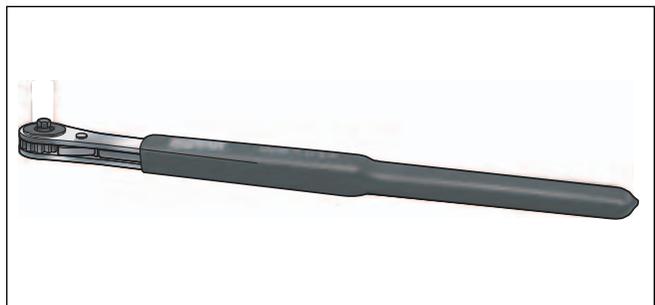


Part No. HD-47258 Rocker Cover Wrench

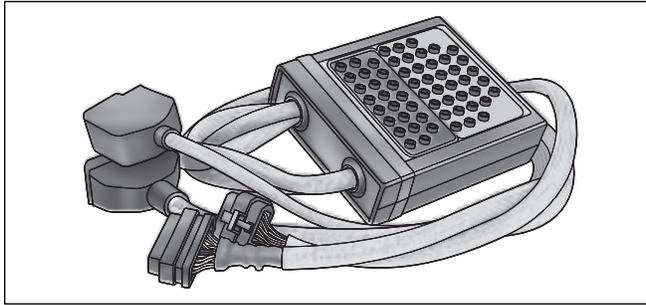


**Part No. HD-47918 Radio Breakout Box
Use with HD-39978.**

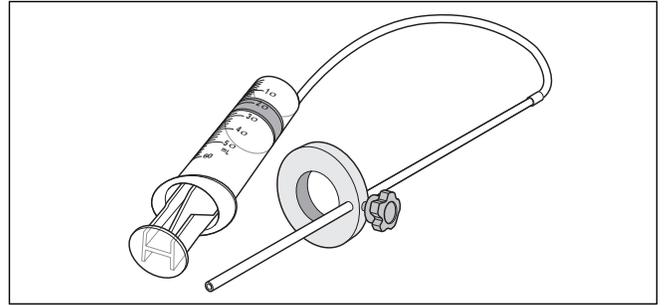


Part No. HD-59000B Fork Oil Level Gauge

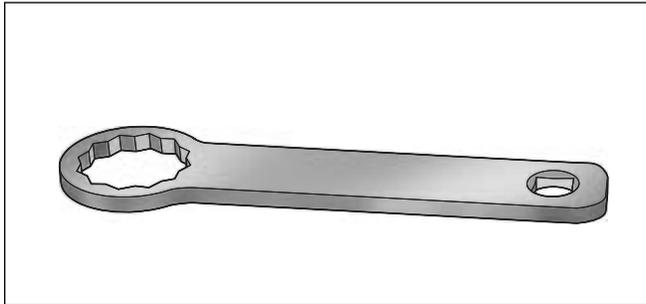


Part No. HD-47925 Axle Nut Torque Adapter

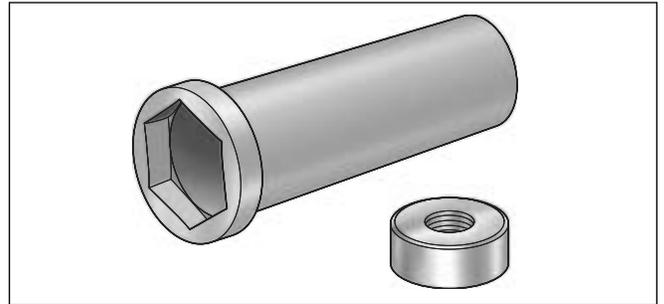


Part No. HD-94660-37B Mainshaft Locknut Wrench

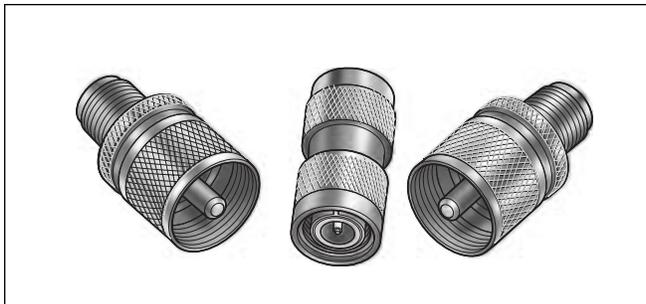


Part No. HD-48037 SWR Meter Adapters

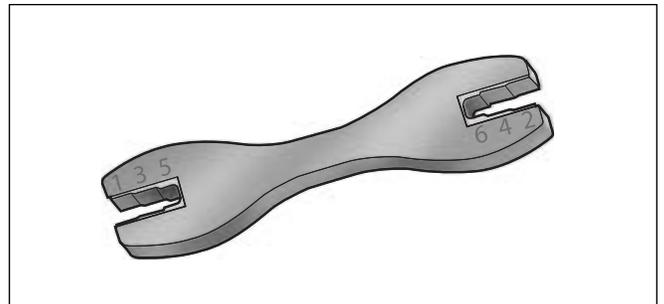


Part No. HD-94681-80 Spoke Nipple Wrench

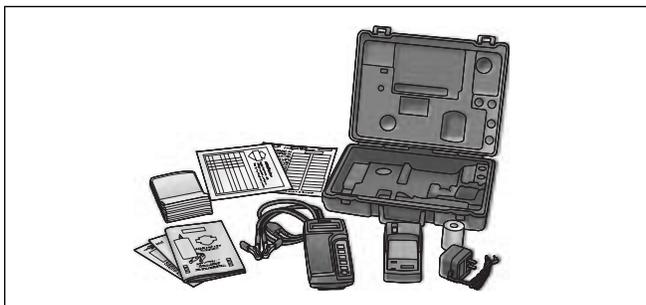


**Part No. HD-48053 Advanced Battery Conductance
and Electrical System Analyzer**

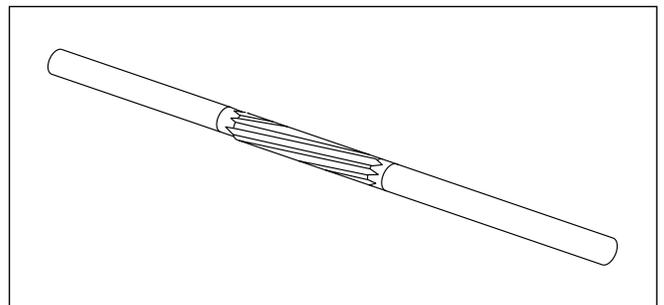


Part No. HD-94804-57 Rocker Arm Bushing Reamer

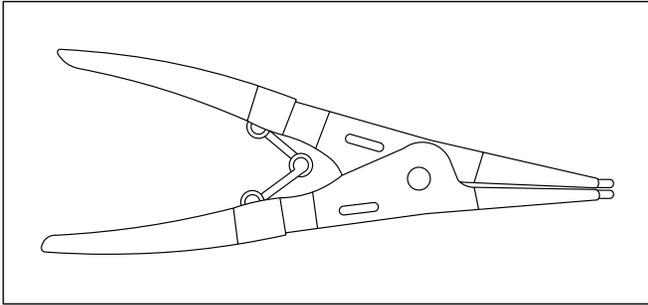


Part No. HD-95017-61 Large External Retaining Ring Pliers

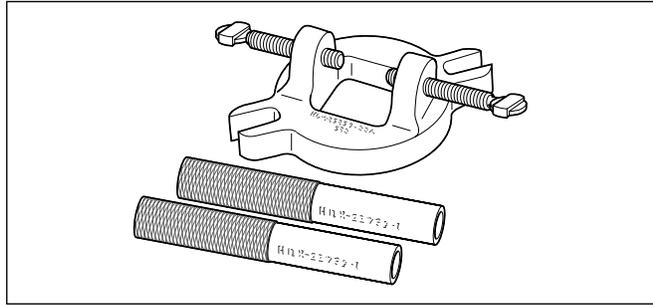


Part No. HD-95952-33B Connecting Rod Clamping Tool

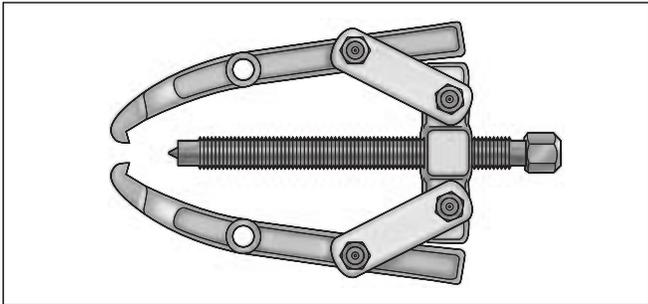


Part No. HD-95635-46 All Purpose Claw Puller

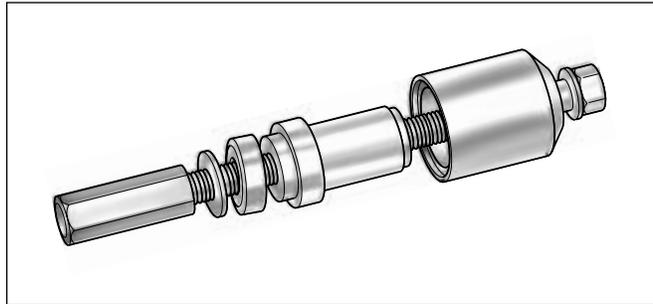


Part No. HD-95970-32D Upper Connecting Rod Bushing Remover/Installer

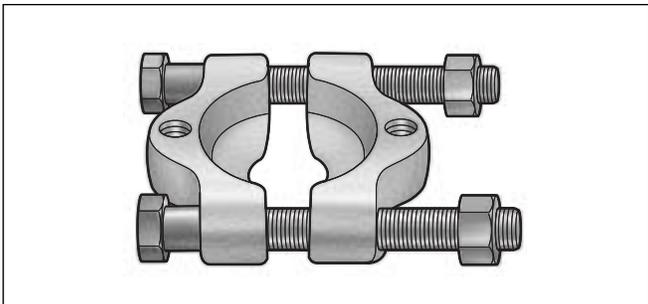


Part No. HD-95637-46B Wedge Attachment for Claw Puller. Use with HD-95635-46.

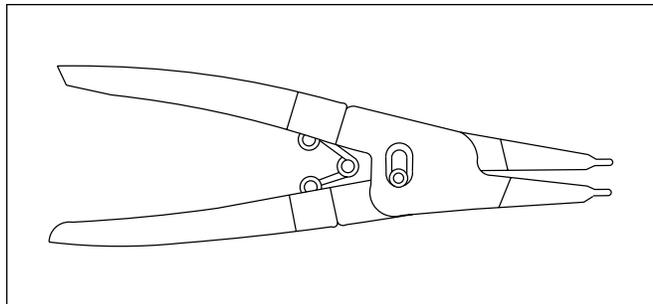


Part No. HD-96215-49 Small Internal Retaining Ring Pliers

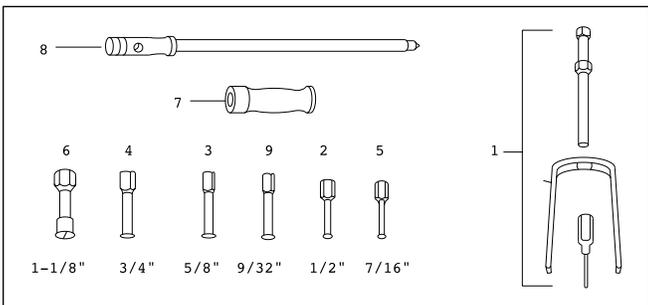


Part No. HD-95760-69A Bushing/Bearing Puller. Items 5 (HD-95768-69), 6 (HD-95769-69), 7 (HD-95770-69) and 8 (HD-95771-69) are optional.

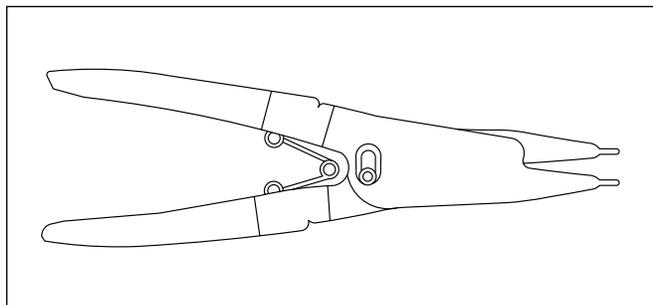


Part No. HD-96216-49 Large Internal Retaining Ring Pliers

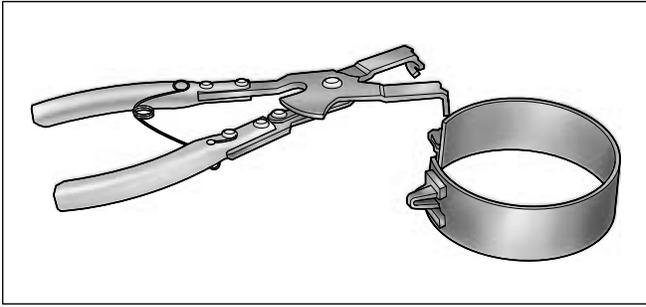


Part No. HD-96333-51E Piston Ring Compressor

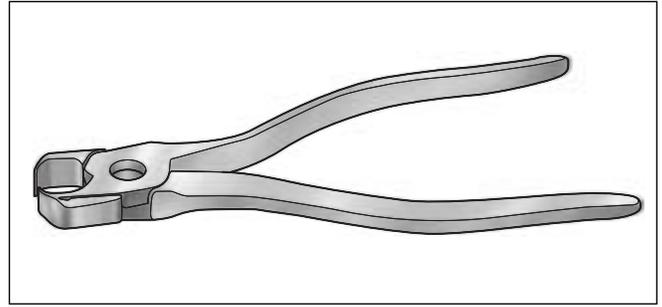


Part No. HD-97087-65B Hose Clamp Pliers

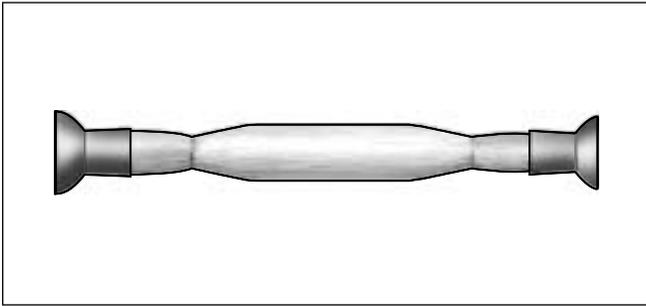


Part No. HD-96550-36A Valve Lapping Tool

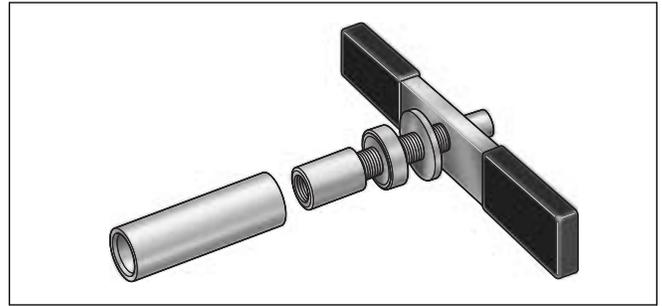


**Part No. HD-97225-55B Sprocket Shaft
(Timken) Bearing Cone Installer
Use with HD-39361A.**

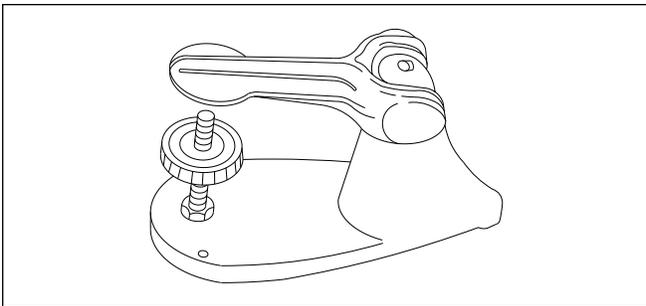

Part No. HD-96796-47 Valve Spring Tester

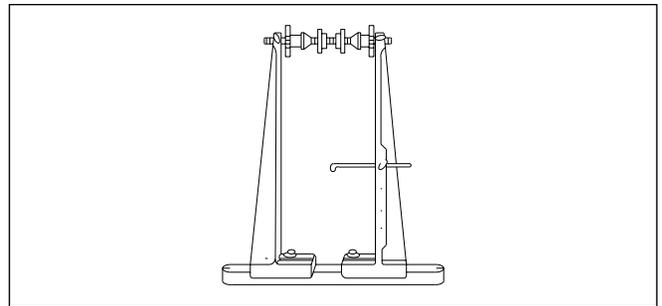

Part No. HD-99500-80 Wheel Truing Stand

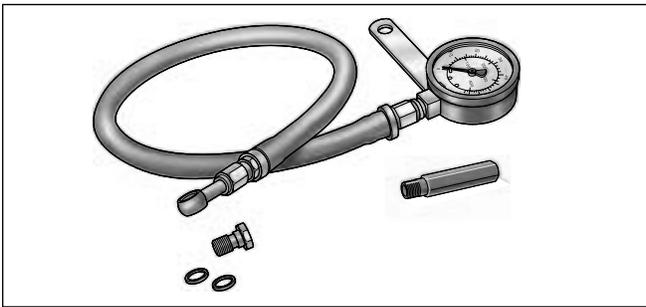

Part No. HD-96921-52B Oil Pressure Gauge

NOTES
