

GENERAL

The FLHTCUSE air cleaner assembly is functionally identical to that of the FLHTCU with the exception of the air cleaner cover, decorative cover trim and cover mounting screws. To remove the air cleaner cover, see the procedure below. For other procedures related to the air cleaner assembly, see the Touring Models Service Manual.

REMOVAL

1. See [Figure 4-1](#). Remove two screws (3) and decorative cover trim (2).
2. See [Figure 4-2](#). Remove screw (2) and air cleaner cover (1).

INSTALLATION

1. See [Figure 4-2](#). Install air cleaner cover (1). Make sure rubber cover seal (3) fits all the way around the cover.
2. Install screw (2). Tighten to 36-60 **in-lbs** (4.1-6.8 Nm).
3. Install decorative cover trim (2) and two screws (3).
4. Tighten to 27-32 **in-lbs** (3.1-3.6 Nm).

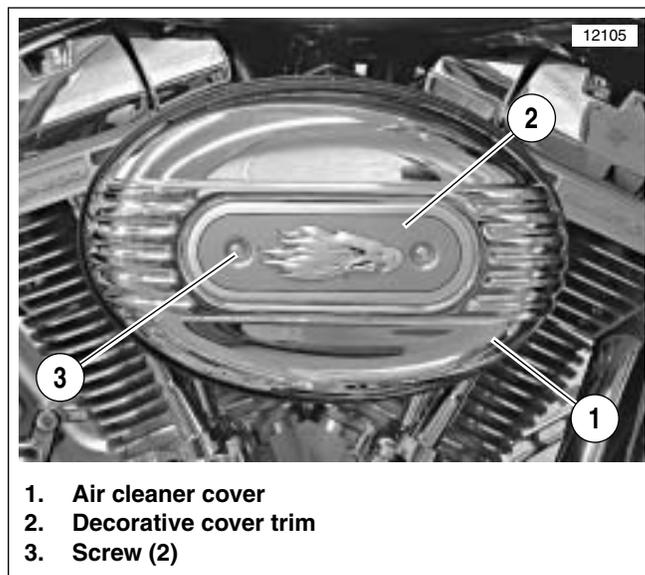


Figure 4-1. Air Cleaner Cover Trim and Screws

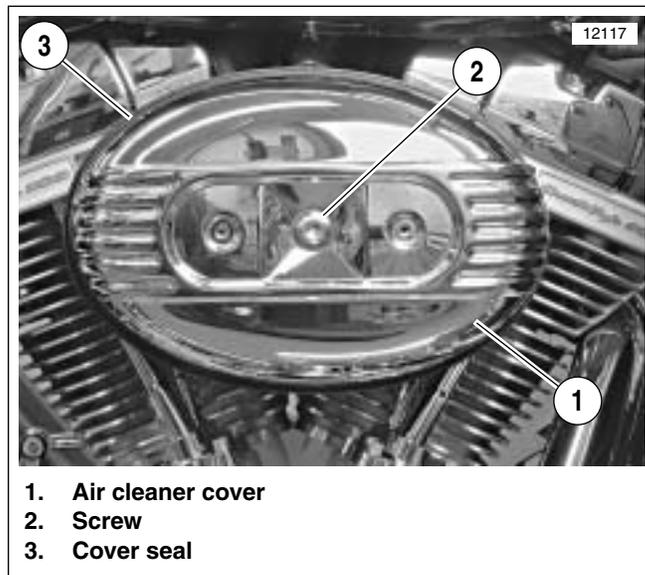


Figure 4-2. Air Cleaner Cover and Screw

NOTES
